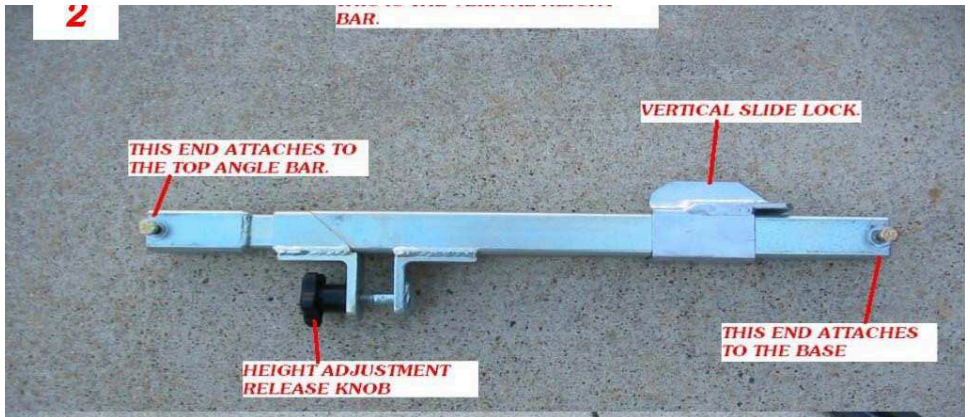
2
BAR.
VERTICAL SLIDE LOCK.
THIS END ATTACHES TO THE TOP ANGLE BAR.
THIS END ATTACHES TO THE BASE
HEIGHT ADJUSTMENT RELEASE KNOB

1
FIRST, SNAP THE REAR LEG ON TO THE BASE
REAR LEG
SLIDE REAR LEG ONTO THE BASE UNTIL THE SNAP PIN IS IN THE HOLE
BASE
SNAP PIN

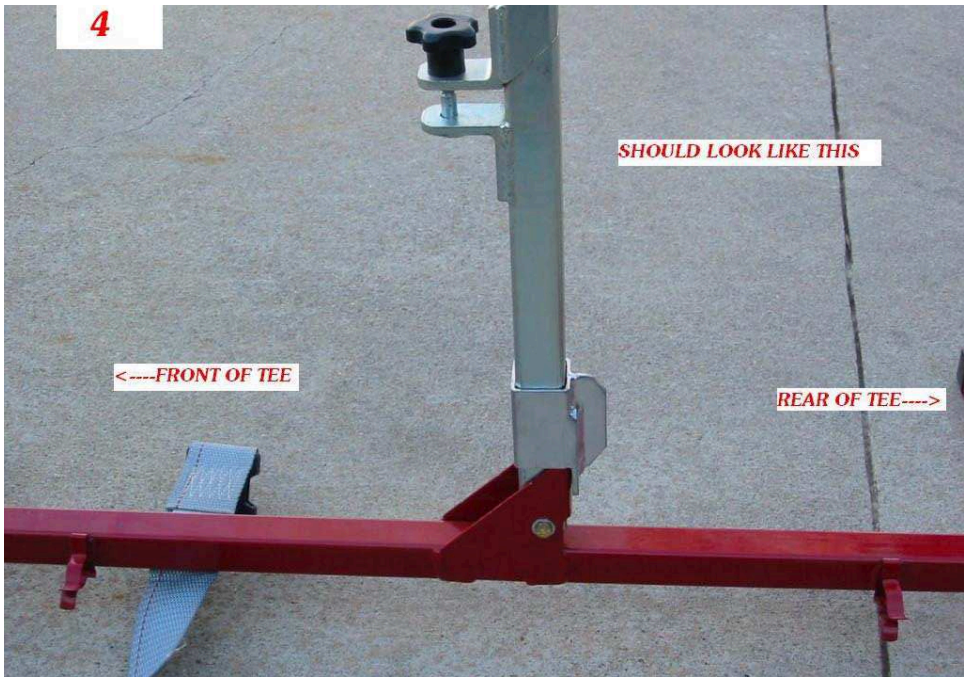
4
SHOULD LOOK LIKE THIS
<----FRONT OF TEE
REAR OF TEE--->

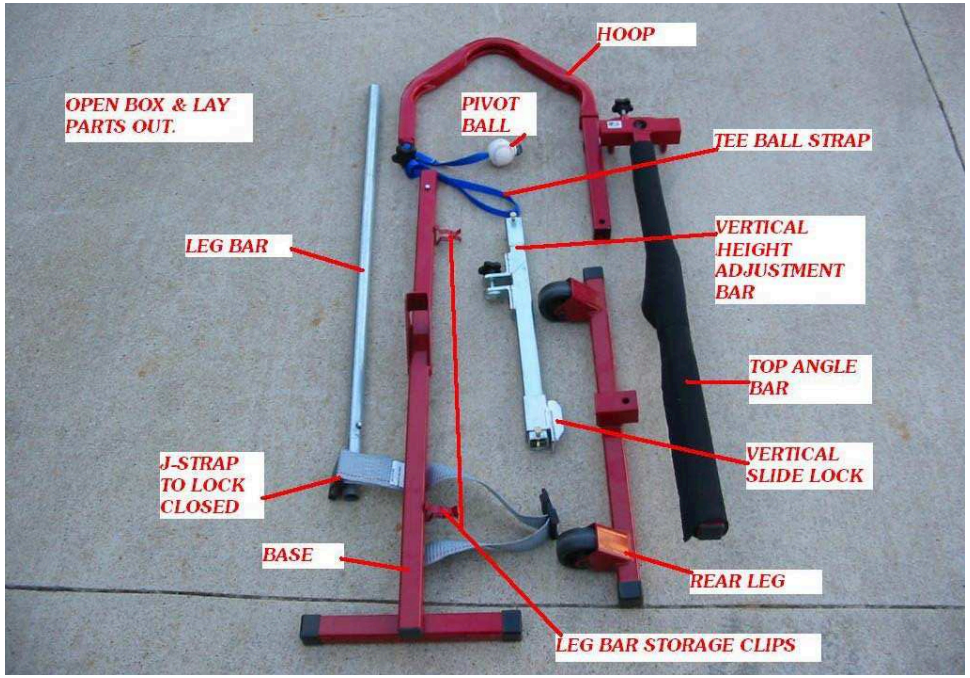
HOOP
OPEN BOX & LAY PARTS OUT.
PIVOT BALL
TEE BALL STRAP
LEG BAR
VERTICAL HEIGHT ADJUSTMENT BAR
TOP ANGLE BAR
VERTICAL SLIDE LOCK
J-STRAP TO LOCK CLOSED
BASE
REAR LEG
LEG BAR STORAGE CLIPS

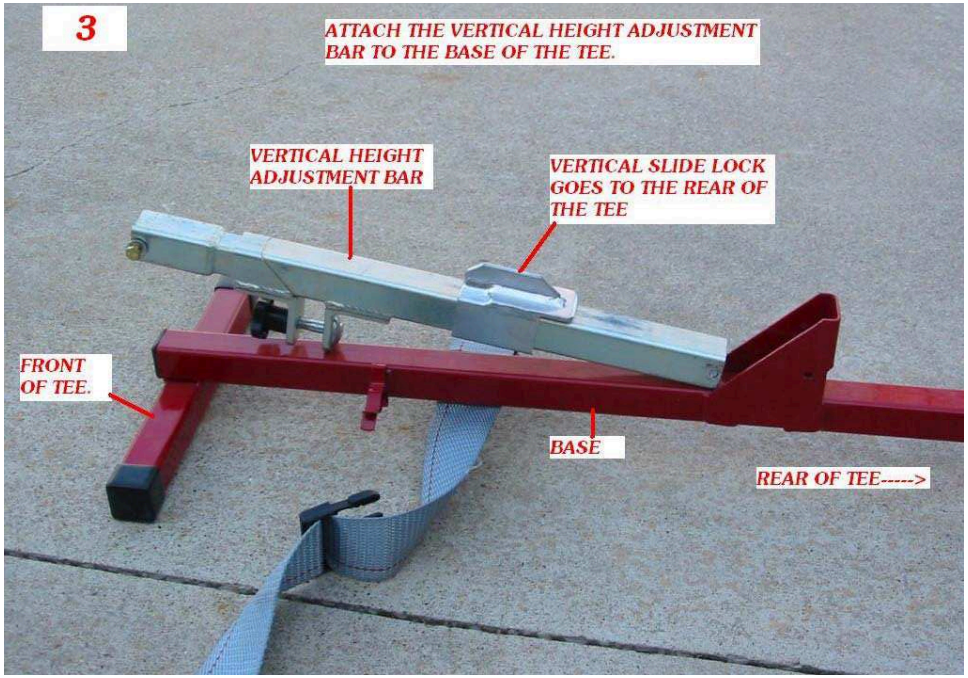
3
ATTACH THE VERTICAL HEIGHT ADJUSTMENT BAR TO THE BASE OF THE TEE.
VERTICAL HEIGHT ADJUSTMENT BAR
VERTICAL SLIDE LOCK GOES TO THE REAR OF THE TEE
FRONT OF TEE.
BASE
REAR OF TEE---->

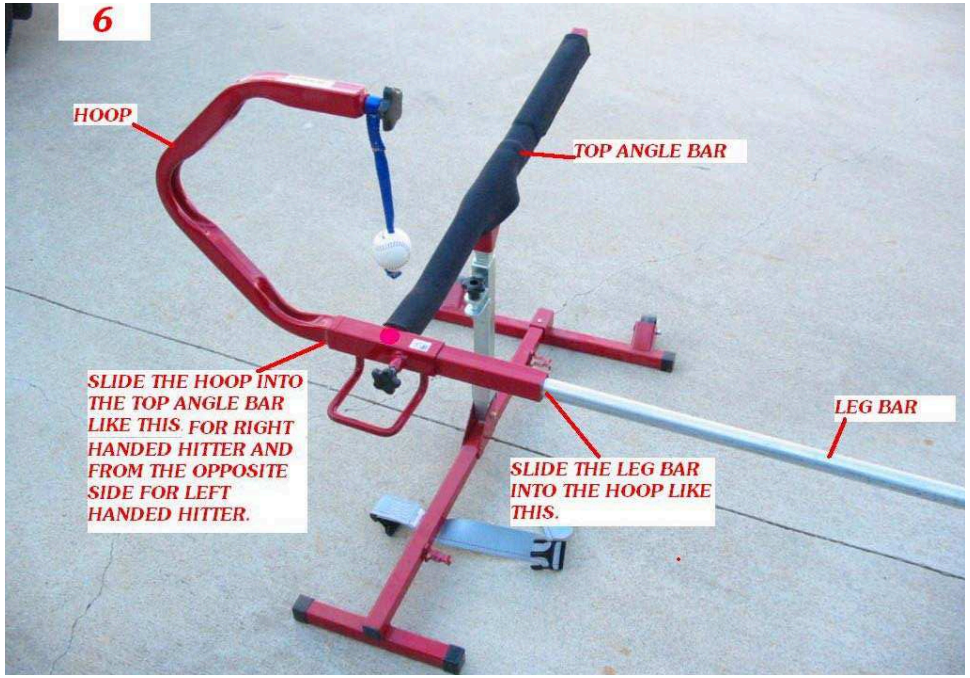
6
HOOP
TOP ANGLE BAR
SLIDE THE HOOP INTO THE TOP ANGLE BAR LIKE THIS FOR RIGHT HANDED HITTER AND FROM THE OPPOSITE SIDE FOR LEFT HANDED HITTER.
LEG BAR
SLIDE THE LEG BAR INTO THE HOOP LIKE THIS.

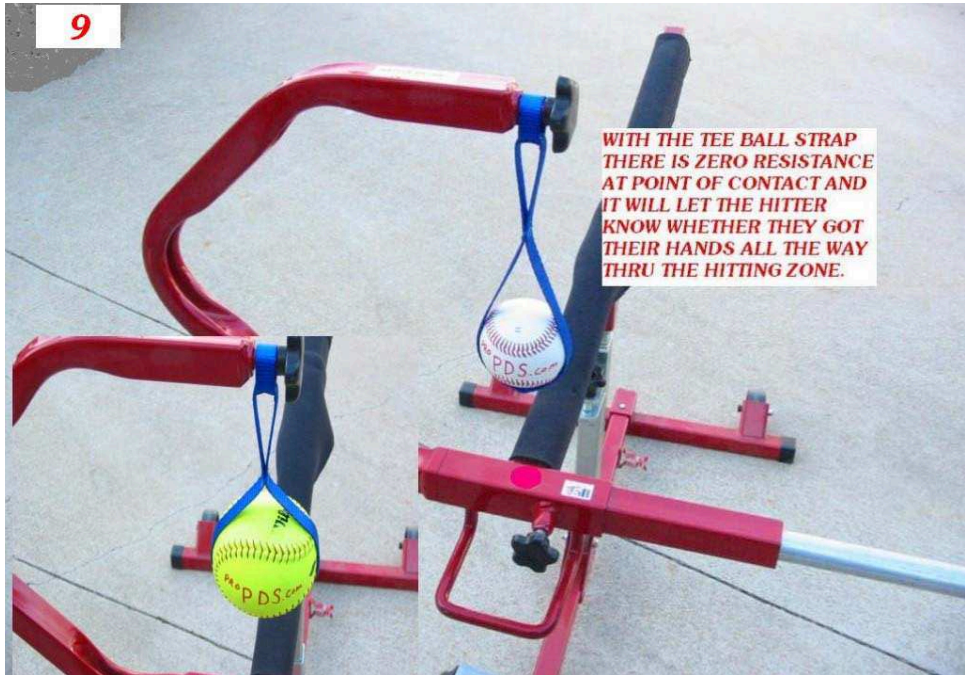
9
WITH THE TEE BALL STRAP THERE IS ZERO RESISTANCE AT POINT OF CONTACT AND IT WILL LET THE HITTER KNOW WHETHER THEY GOT THEIR HANDS ALL THE WAY THRU THE HITTING ZONE.

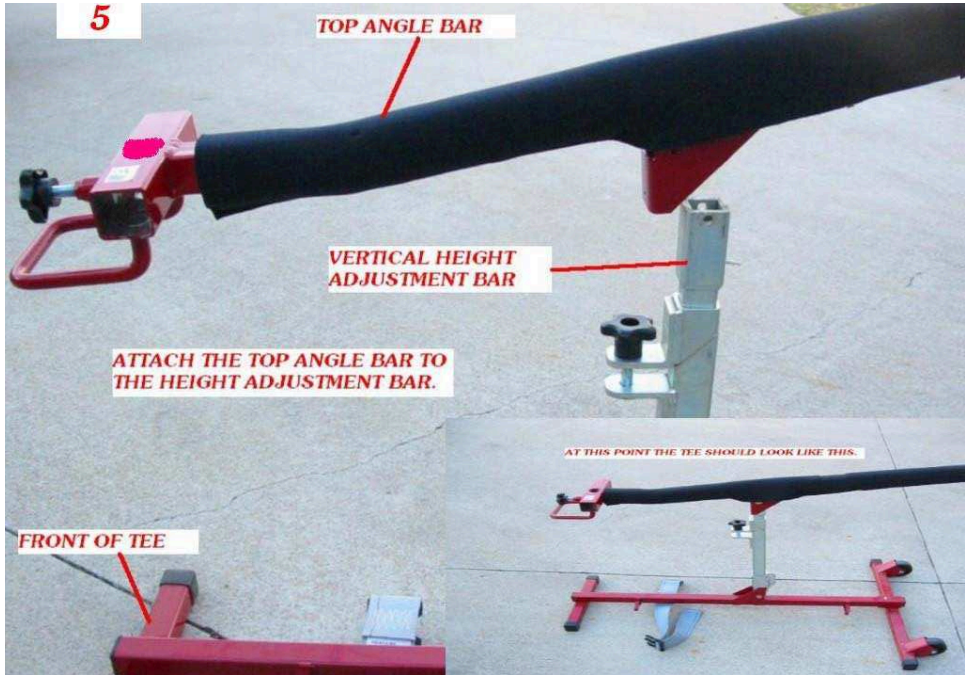
5
TOP ANGLE BAR
VERTICAL HEIGHT ADJUSTMENT BAR
ATTACH THE TOP ANGLE BAR TO THE HEIGHT ADJUSTMENT BAR.
AT THIS POINT THE TEE SHOULD LOOK LIKE THIS.
FRONT OF TEE

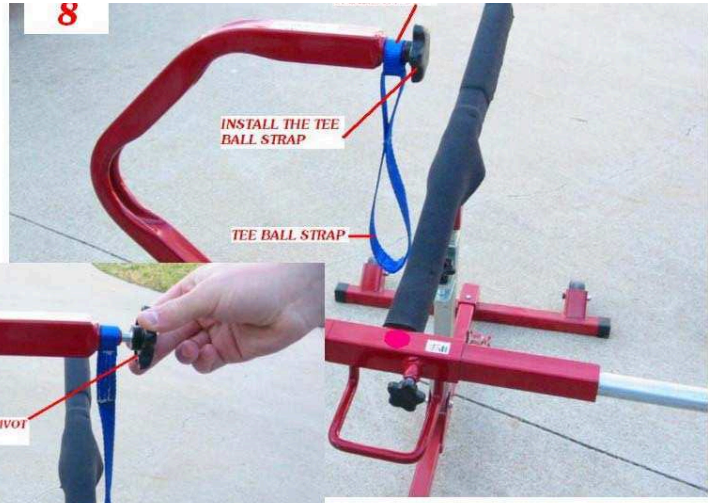
8
INSTALL THE TEE BALL STRAP
TEE BALL STRAP

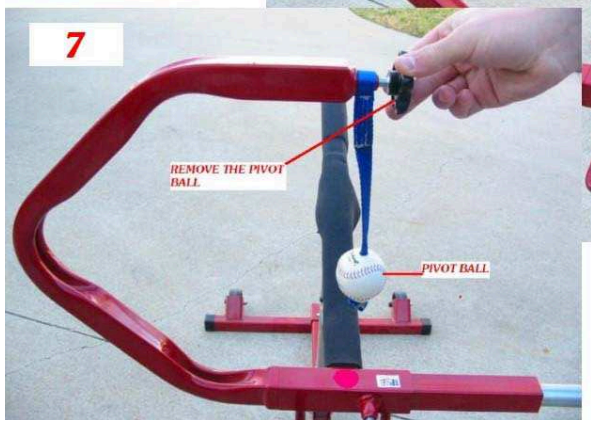
7
REMOVE THE PIVOT BALL
PIVOT BALL

10
THIS IS HOW YOUR "POWER DRIVE TEE-FOLD-N-GO"
SHOULD LOOK WHEN FOLDED DOWN.